


CNH7M-A

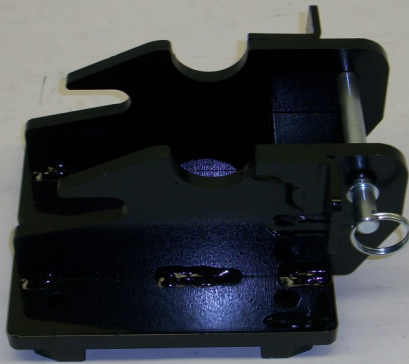

CIH 2200-3400

Quick-tach

STOMPERS

(815) 426-2330 office

WWW.NDYMFG.COM

20AS-AR512



CIH

2200,2400,3200,3400

ALL ROWS

NO HARDWARE NEEDED

- 1) Remove gearbox bolts (discard oem strap)
- 2) Install NDY bracket using same gearbox bolts
- 3) Tighten evenly in a circular motion
- 4) Install shoe with quick-tach pin

OPITIONAL SHOE HANGER

