

Installation Instructions for 40/90 series Corn Head

1. Remove nuts and guard



2. Remove bolts and eyebolts



3. Insert Plate A and reinstall bolts






4. Reinstall guard, lock washer and nut to the studs on Plate A



5. Attach the mount to Plate A using the supplied 1 3/4" long bolts with lock washers and tighten.

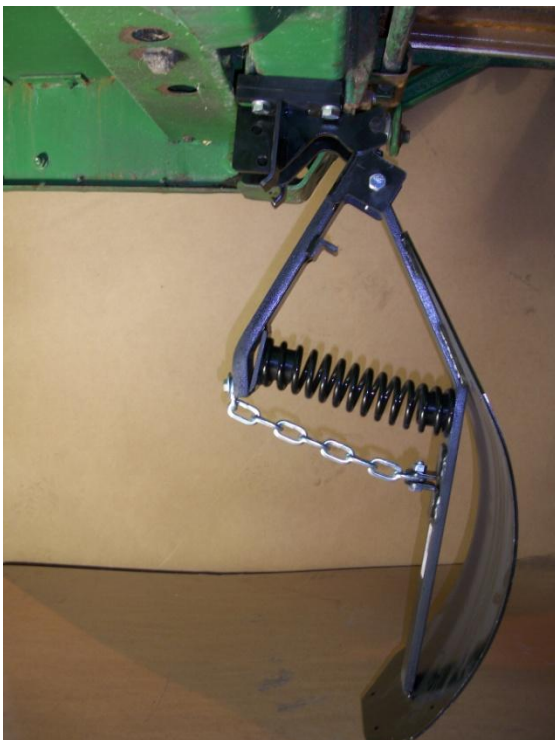

6. Install Shoe Assembly

Row 2, 7- U-shaped arm on 893

Row 3,10 U-shaped arm on 1293

Row 6 offset on 893

All other row are standard arms