


**Installation Instructions for Case 2200-3400  
New Holland 996, 96C/D, and 98C/D  
All Rows**

20AS-AR552

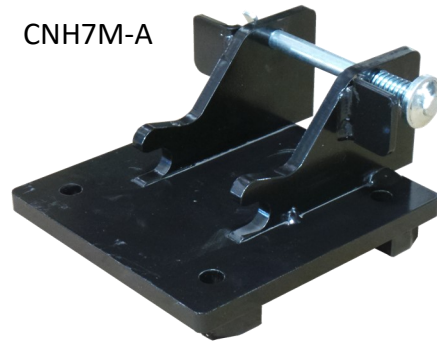

CNH7M-A



1. Remove gearbox bolts.  
Discard OEM strap.
2. Install NDY mount using the  
existing gearbox bolts.
3. Tighten evenly in a circular  
motion.
4. Install arm and shoe assembly  
with quick-tach pin.

\*Previous style arm and shoe assembly shown in picture.