



Capello Diamant Installation for NDY Stalk Stompers

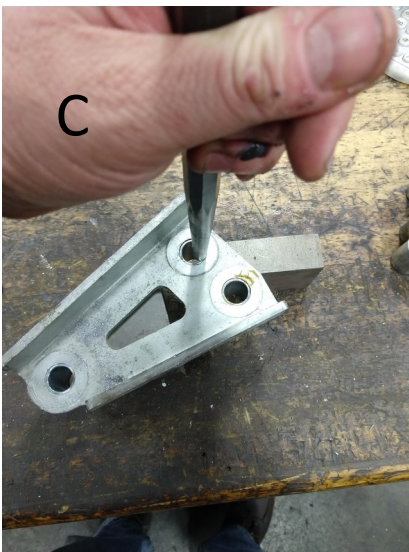

- 1 - Remove guard shield 'B'
- 2 - Remove bracket 'A' on one side of the row unit
- 3 - Remove bushings 'C' and place into bracket 'D'
- 4 - Install bracket 'D' back into row unit with supplied longer bolts. If there are shim washers, place them on the bushings before installation.
- 5 - Repeat for other side
- 6 - Install stomper base plate with supplied hardware.
- 7 - Repeat for other rows
- 8 - Install shields once the mounts are in place.

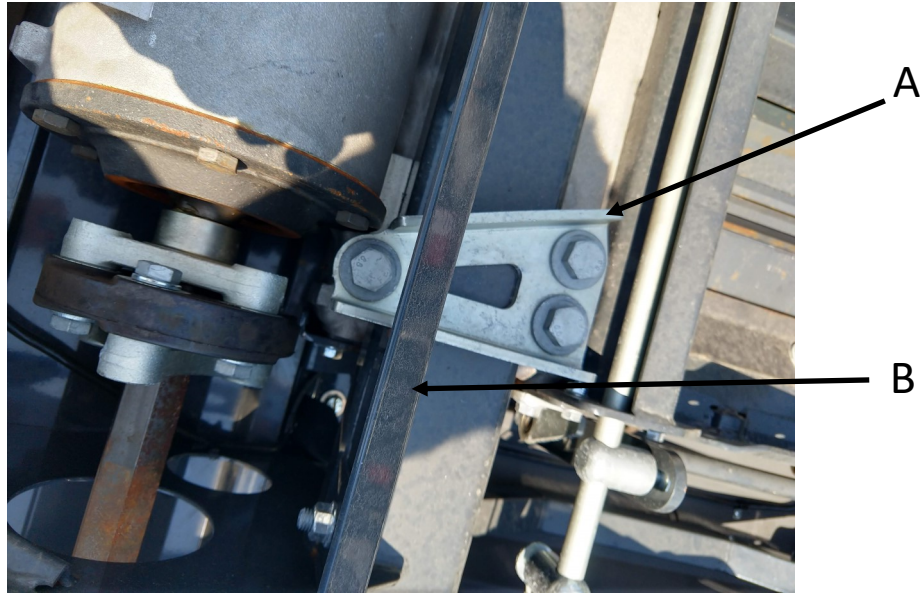