


Installation Instructions for Drago Non-Chopping Corn Heads All Years


For 6 Row 30", 8 Row 30" Rigid, 12 Row 30" Rigid, 16 Row 30" Rigid

20AS-AR552

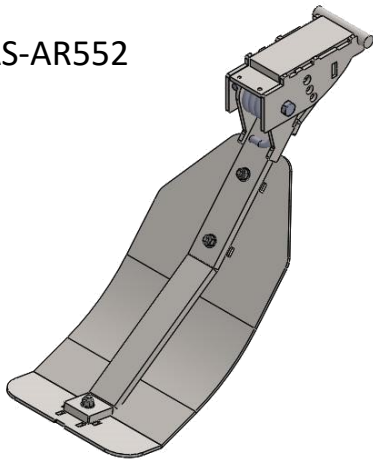


Part# D8000-SB

D8104-MA

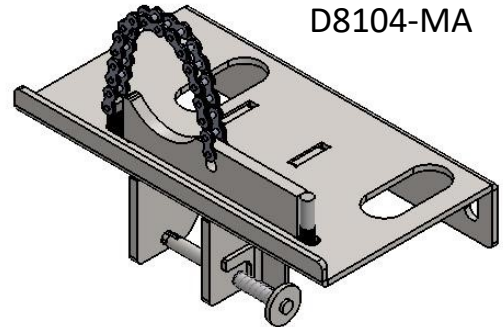


For 8 Row 30" Folding

20AS-AR554(L)

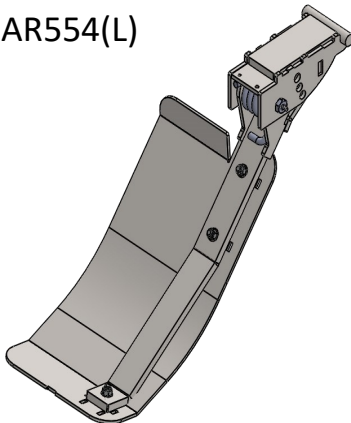


Part# D8008F-SB

Rows 1, 3, 4, 5, 6, 8

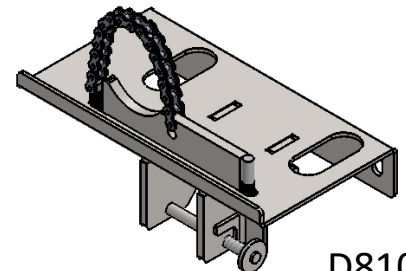


D8100-MA

Row 2

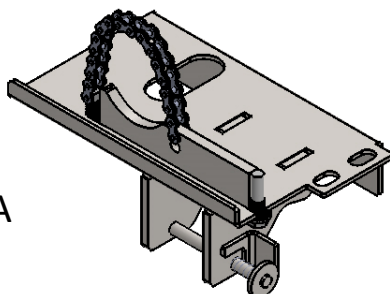

D8101-MA

Row 7

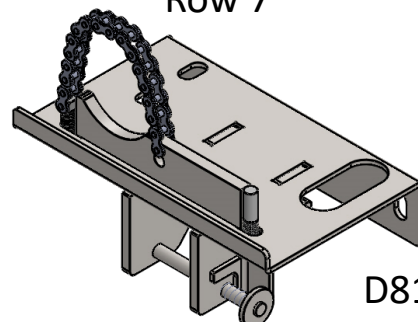


D8102-MA


For 12 Row 20" & 22" Rigid Part # - D8012/20-SB

4590 N 11000W Road
Bonfield, IL 60913
(815) 426-2330

20AS-AR554(L)
All rows

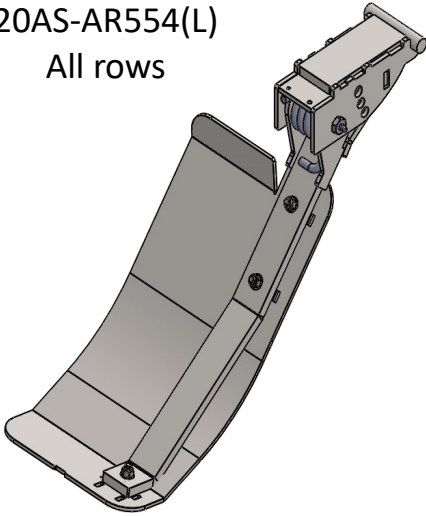


Rows 1, 11

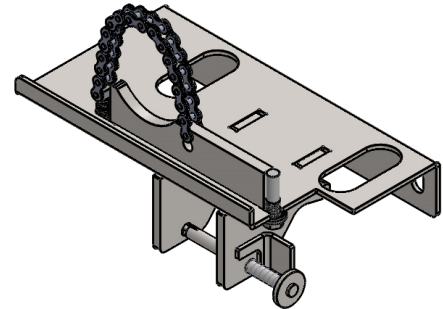

D8103-MA


Rows 2-10, 12

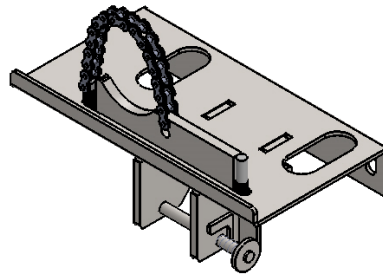

D8100-MA


For 12 Row 30" Folding Part # - D8012F-SB

20AS-AR552

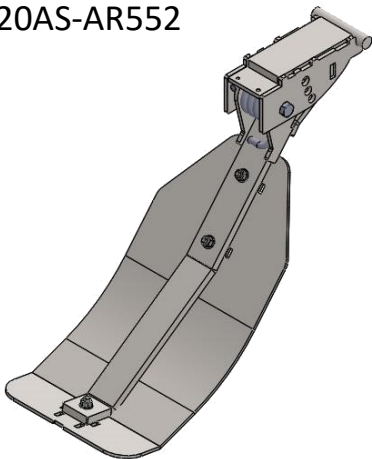


Row 1, 2, 4-9, 11, 12

D8104-MA

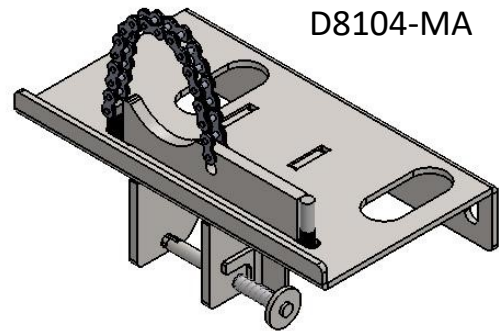


Row 3

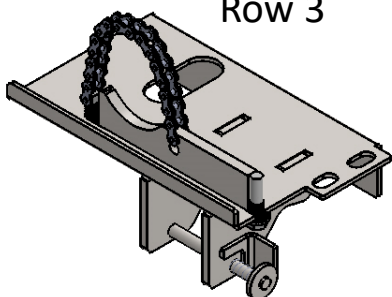


D8101-MA

20AS-AR554(L)

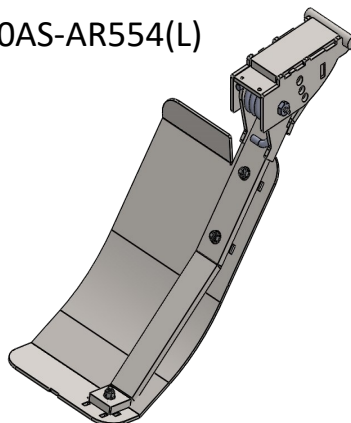

Row 10

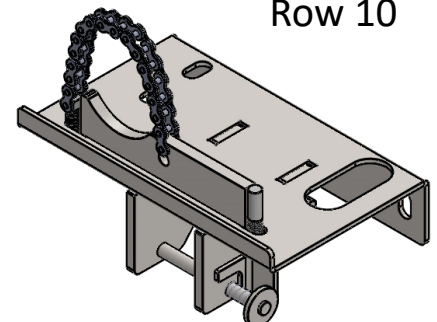


D8102-MA


For 16 Row 30" Folding
Part # - D8016F-SB

4590 N 11000W Road
Bonfield, IL 60913
(815) 426-2330

20AS-AR554(L)
All rows

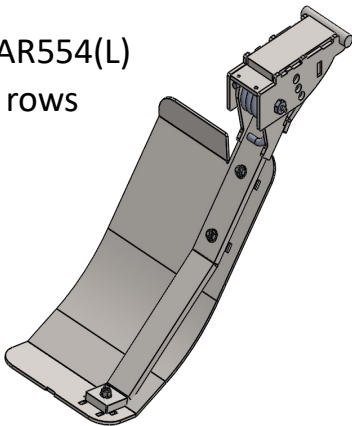


Rows 1-4, 6-12, 14-16

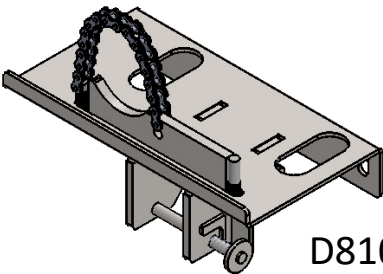


D8100-MA

Row 5

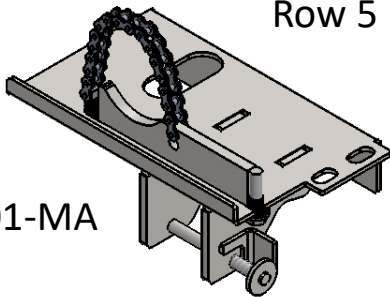

D8101-MA


Row 13

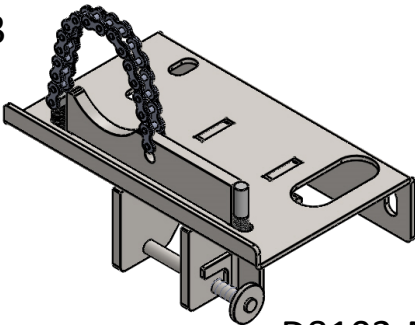


D8102-MA

For 18 Row 20" Rigid
Part # - D8018/20-SB

20AS-AR552

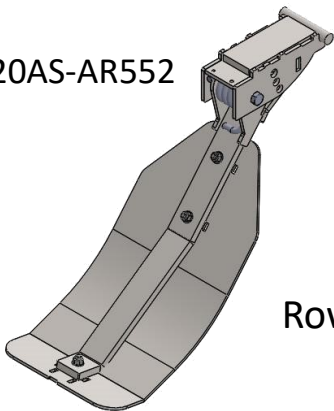


D8104-MA

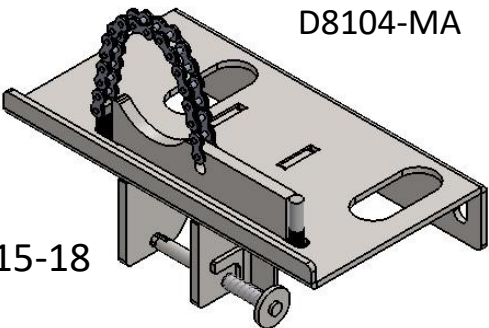


Rows 1-3, 5-13, 15-18


20AS-AR554(L)

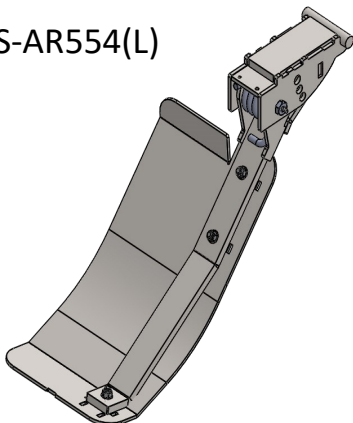

Rows 4, 14

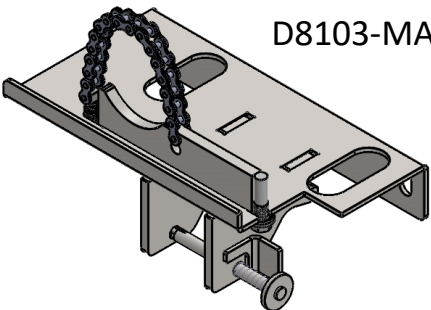

D8103-MA

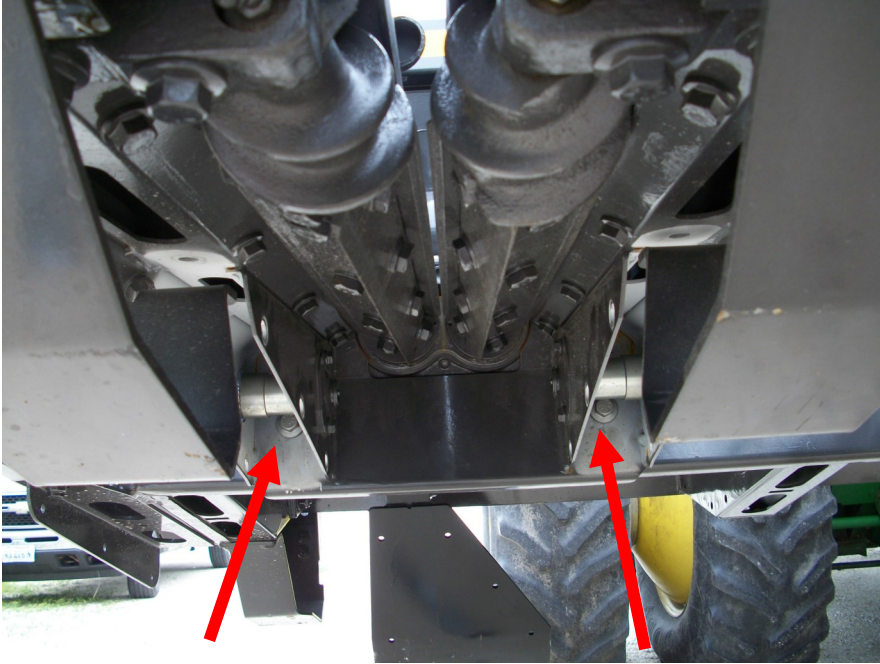


1. Remove cover under snapping rolls to gain access to the flange bolts. Arrows pointing to bolts that need to be removed.




2. Bolt mount to frame using existing bolts.
3. Wrap roller chain around casting and tighten using provided hardware.
4. Install cover that was taken off in step 1.

*Shown is Part#D8100-MA

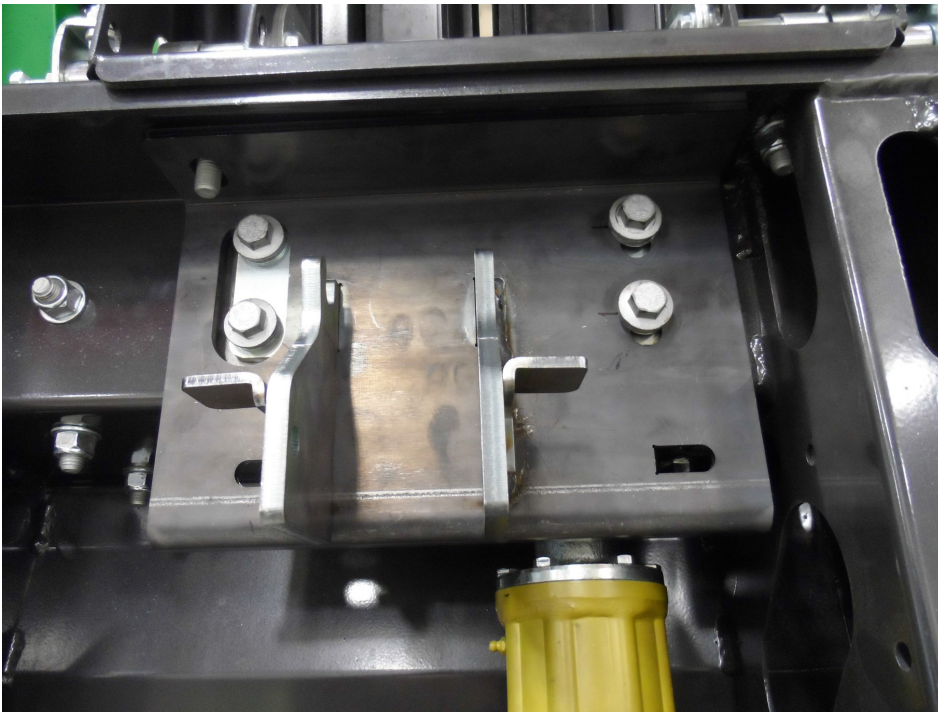

*Shown is Part#D8102-MA

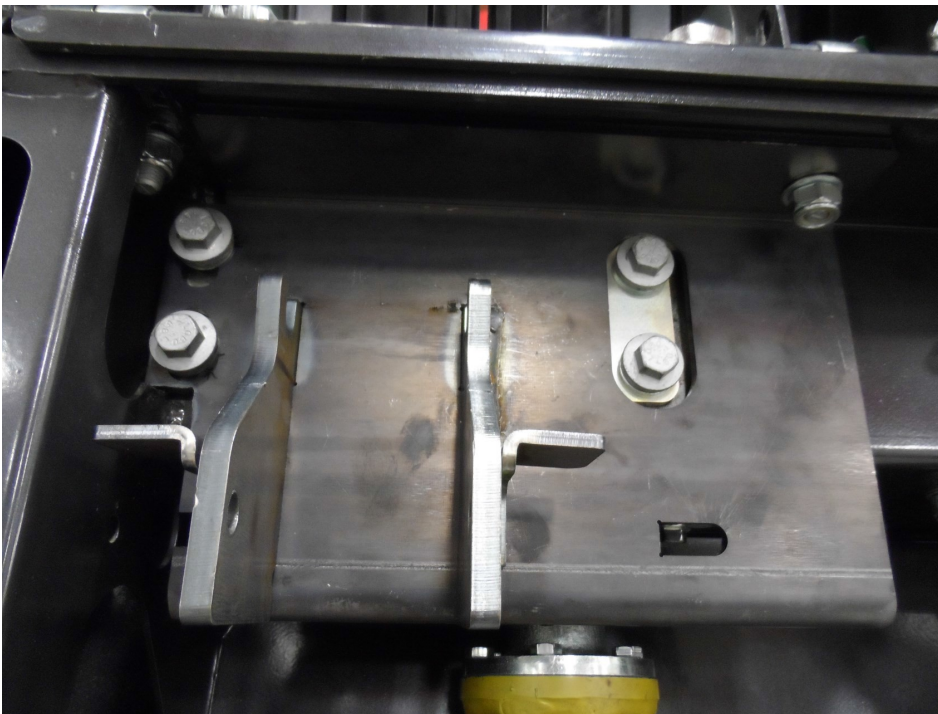

*Shown is Part#D8101-MA

Example photos for
other style mounts.