



Step 1:
Remove chain from bolt-on-arm

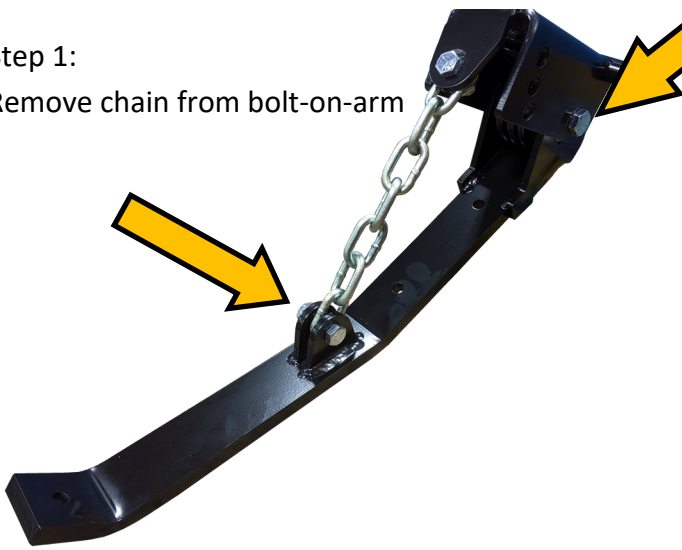

Step 2:
Unbolt bolt-on-arm from 3 position arm

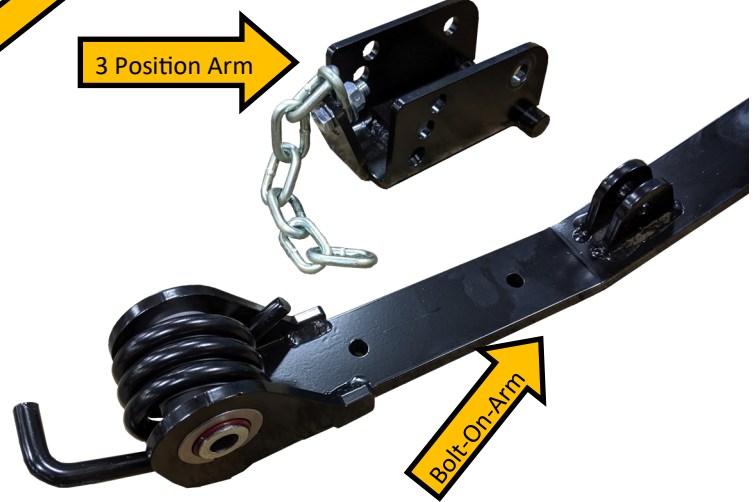

Step 3:
You can remove bushing by pressing side with flat notch



Step 4:
Reassemble new spring and bushings into bolt-on-arm
note position of spring legs



Step 5:
Bolt 3 Position arm and bolt-on-arm back together



Step 6:
Attach chain to bolt-on-arm
to easily compress stomper, place shoe back into mount on the corn head and use that leverage

