



Installation Instructions for Case 4000 Series, 2608 Rigid, 2612 Rigid, New Holland 99C, 980CR, 980CF

20AS-AR529

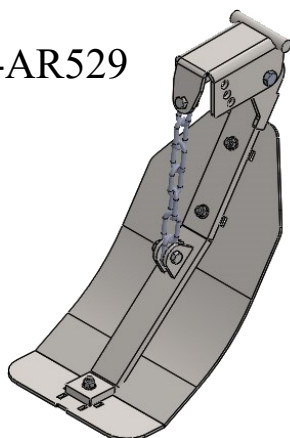

Case 4006 Series
New Holland 980CR-6
Part # - CNH4006-AR


Case 4008 Series, 2608 Rigid
New Holland 980CR-8, 99C-8 Rigid
Part # - CNH4008-AR

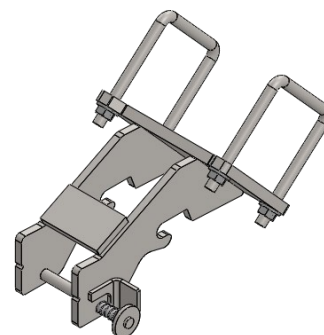

CNH4000-MA


Case 4012 Rigid, 2612 Rigid
New Holland 980CR-12, 99C-12 Rigid
Part # - CNH4012-AR

Row 1

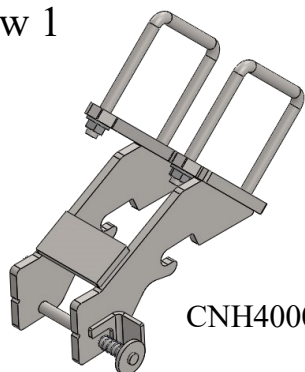


CNH4000-MAR

Rows 2-11

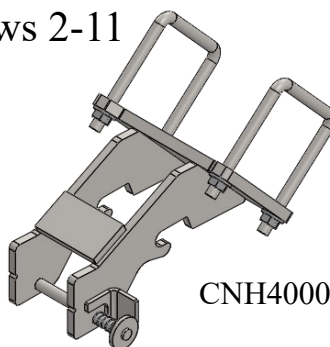


CNH4000-MA

Row 12

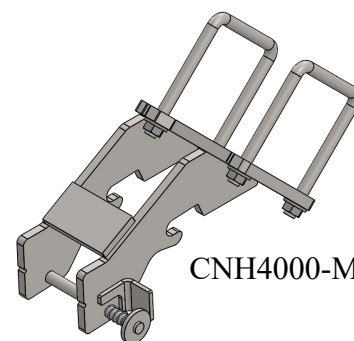


CNH4000-MAL


20AS-AR531(R)

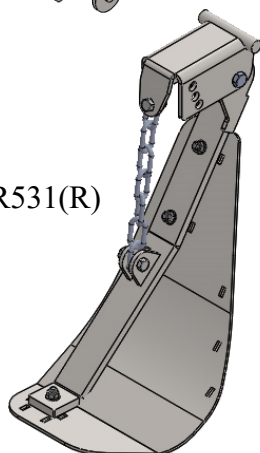

20AS-AR529

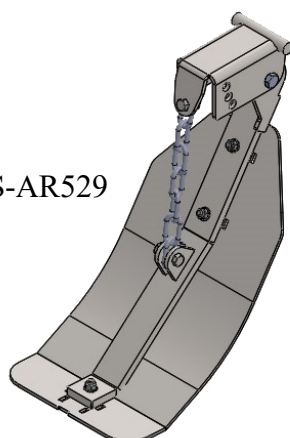


20AS-AR530(L)

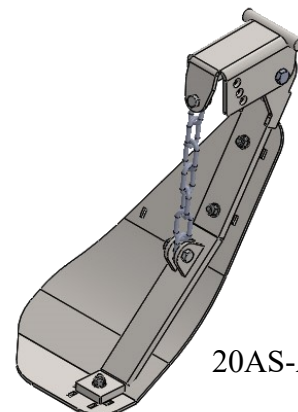


Case 4012 Folding
New Holland 980CF-12

Part # - CNH4012F-AR


Row 11

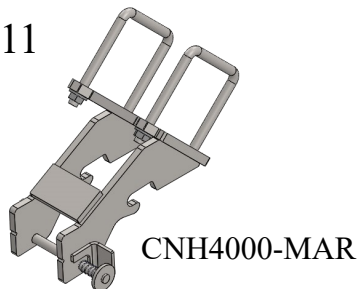


Rows 1, 3-10, 12

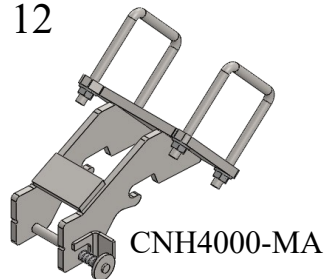


Row 2

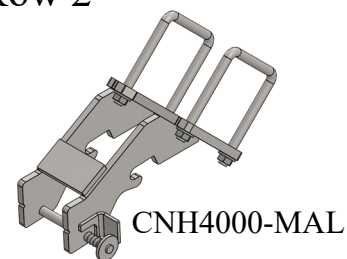


20AS-AR531(R)

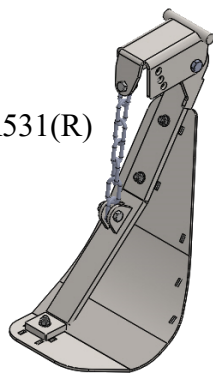

20AS-AR529

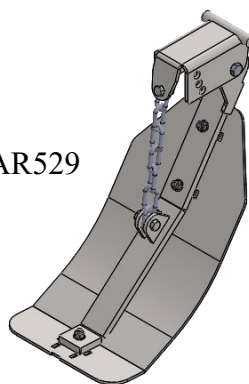


20AS-AR530(L)

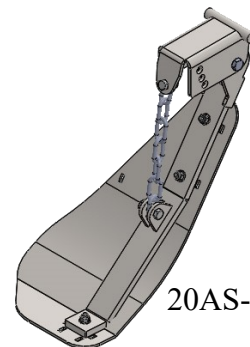


Case 4016
New Holland 980CR-16

Part # - CNH4016-AR


Row 10

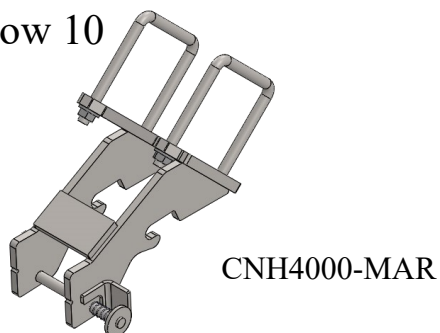


Rows 1-6,
8, 9, 11-16

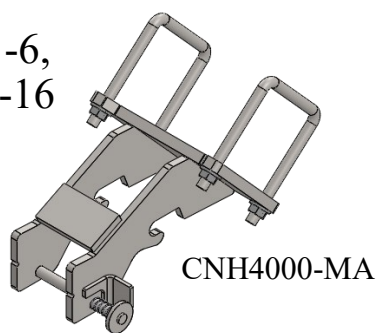


Row 7

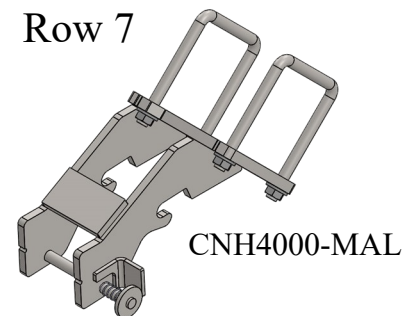


20AS-AR531(R)

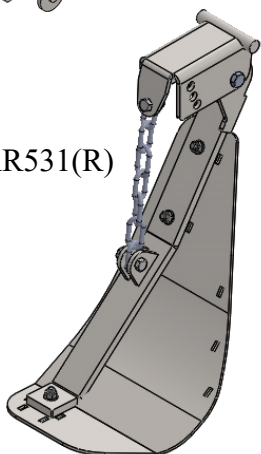

20AS-AR529

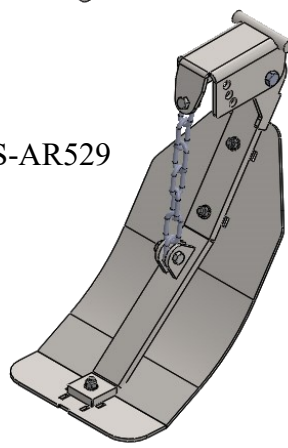

20AS-AR530(L)

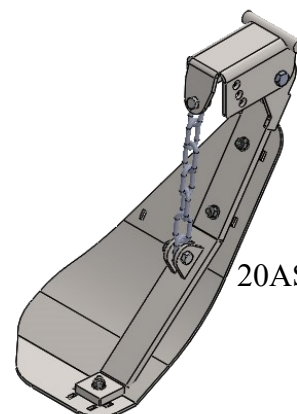

Installation Instructions for Case 4000 Series, 2608 Rigid, 2612 Rigid, New Holland 99C, 980CR, 980CF



1. Loosen guard bolts that protect the drive shaft.

(13 mm wrenches)



2. Place U- Bolts on top of main frame tube (from the back).

Rotate around the tube and between the guard shield.




3. U-Bolts should be facing towards the back.



After both U-Bolts are around the main frame tube, center the mount with the center of the row and tighten nuts on U-Bolts.

Push guard back against the U-Bolts and tighten the guard bolts.

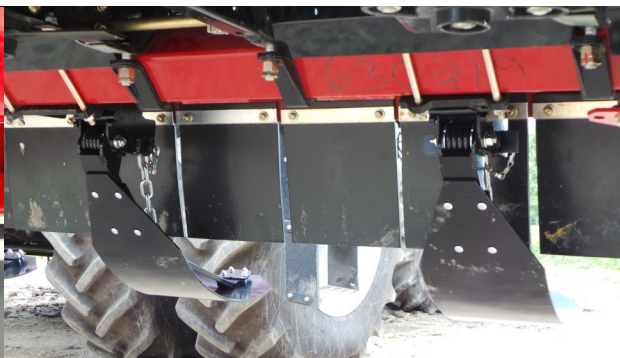

*Previous style stomper shown in photos.