


Installation Instructions for Mud Scraper fitting John Deere “S” and “STS” Series

Complete part # JDMS-S/STS

Step 1.

Place Mount Brackets on combine frame with carriage bolts in in place for ease of installation.

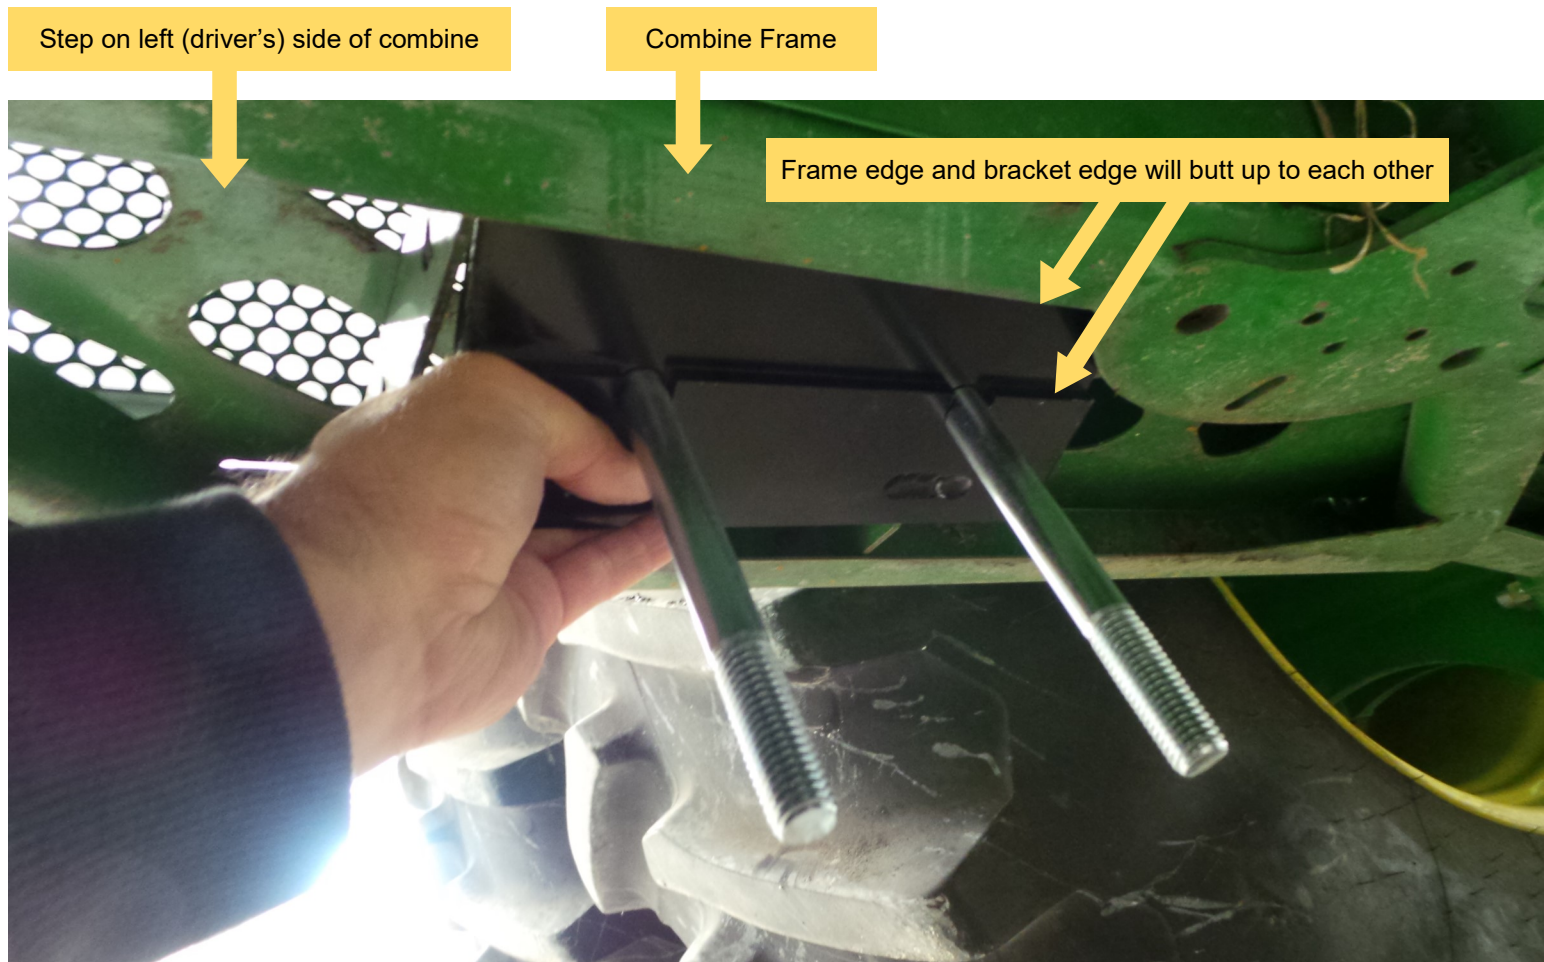


Step 2.

Bolt together Main Tube Right and Main Tube Left, and position centered under the combine.

See schematic for orientation of the tubes.

Step 3.

Using the Bottom Mount Plates, mount tubes against combine frame.

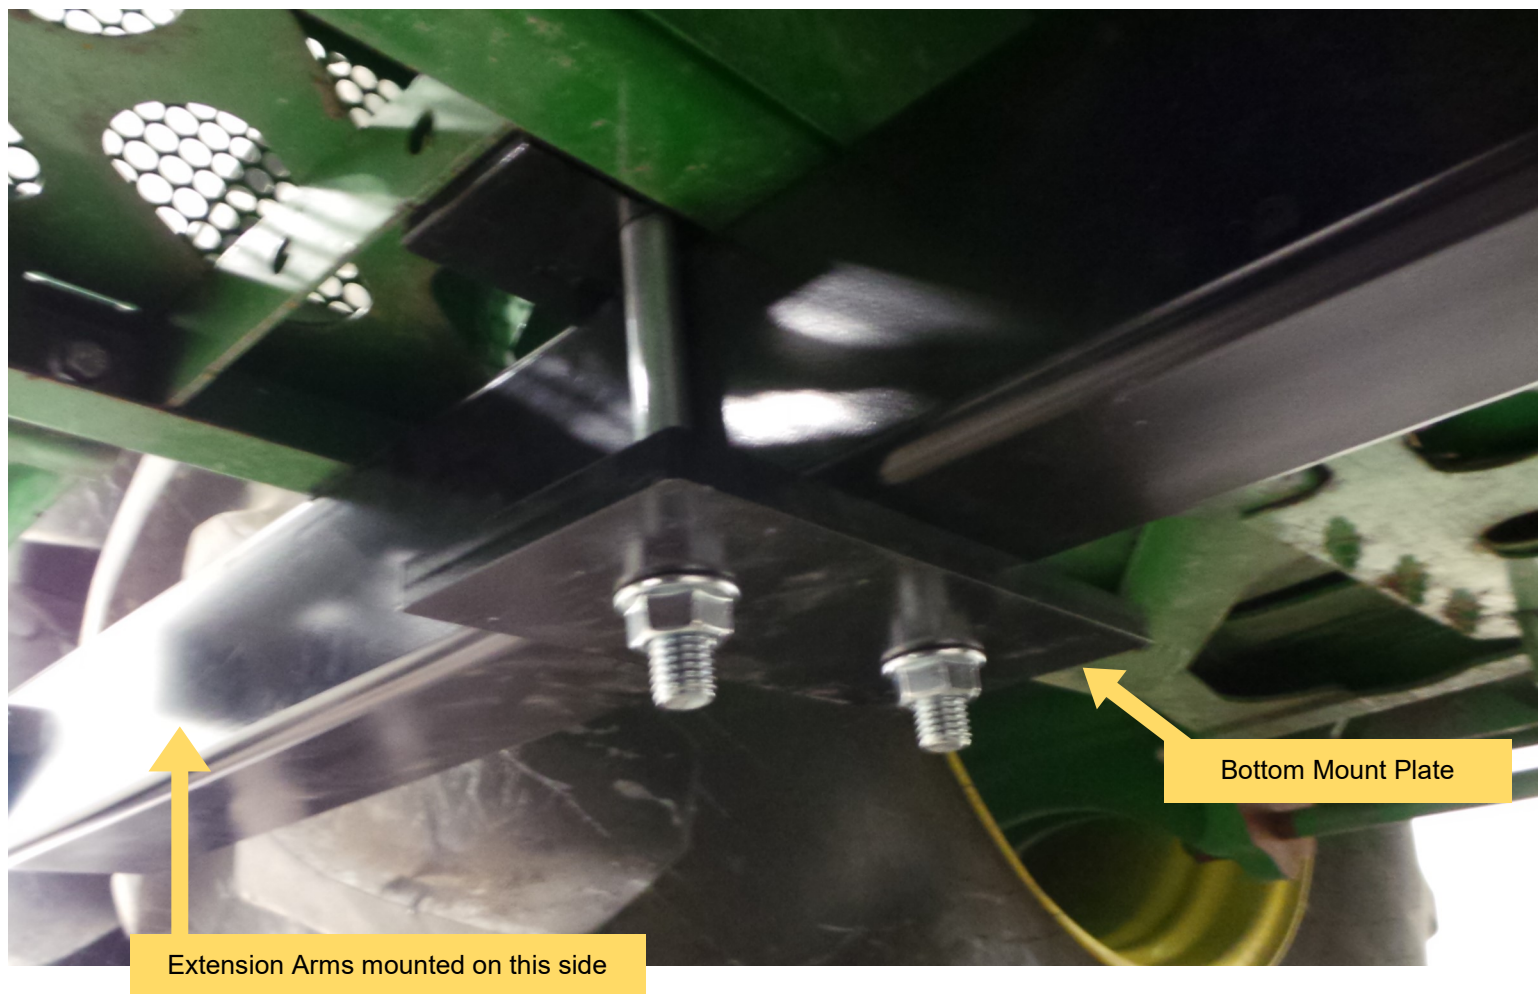

Step 4.

Attach Extension Arms with U-Bolts

Step 5.

Attach scraper arms to extension arms

Note: Scraper Plates on Scraper Arms may not be used if tires are too narrow.